




LC5 Instruction Manual

Thank you for purchasing high performance Pixel product LED Remote Control ! Its feature include Group Setting, Channel Setting, Quick Brightness Adjust and Color Temperature Adjust.LC5 is using global free channel 2.4GHz FSK which more reliable and low power consumption display for easy to control the LED. Before using this product, you must read the manual and fully understand how to use it and ensure that you can easily handle the operation method and also use it properly.

Caution

- 1.This product involved in electronic product accessories which may cause the failure to use of this device. But this possibility is very low.
- 2.Power off the device and remove the batteries during long periods of non-use.
- 3.The batteries should be installed correctly. Reverse polarity may cause batteries to leak corrosive liquids, heat or explosion.
- 4.Do not expose this product in high temperature locations, such as confined car exposed to strong direct sunlight, control panel and other overheating places.
- 5.Keep it dry. Do not touch this product with wet hand. Do not expose this product to water or rain, or you may not be able to use it.
- 6.Do not use it inflammables gas, or it may cause explosion or fire.

Name of Parts

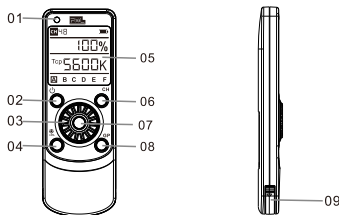

- | | | |
|--|------------------|------------------------|
| 01.Indicator Light | 02.Power Button | 03.Multi-Function Dial |
| 04.Quick Brightness Adjust | 05.Display | 06.Channel Setting |
| 07. Color Temperature Adjust / Confirm | 08.Group Setting | |
| 09.Battery Compartment | | |

Operation

1.Indicator Light

The indicator light will blink when changing the setting.

2.Power Button

Press power button for 2sec to turn on the power; press power button for 2sec to turn off the power during the remote power on.

3.Multi-Function Dial

Rotate the dial to adjust the brightness, color temperature and channel setting.

4.Quick Brightness Adjust

Press this button to quick adjust brightness between 1%/25%/50%/75%/100%

5.Display

HD LCD Display

6.Channel Setting

Press this button, the [CH] (left top corner) keep blinking. Rotate the dial to adjust channel between 1-48. Press OK button or wait 6sec to confirm the setting. Remote control only work with the same channel LED panel.

7.Color Temperature Adjust / Confirm

Press Confirm button to adjust the color temperature, TCP keep blinking and rotate the dial to adjust between 3200~5600K. Press Confirm button or wait 6sec to confirm the setting.

8.Group Setting

Press [GP] button to change the group between A/B/C/D/E/F 6 groups. Remote control only work with the same group LED panel.

9.Battery Compartment

Battery compartment is under left bottom corner of remote control. Buckle open the compartment and put the battery in. Make sure the battery positive "+" side face up. During changing the battery, please slightly pull out the compartment and take the old battery out.



Specification

Style:	FSK2.4GHz Wireless System
Channel:	48
Group:	A.B.C.D.E.F
Dimension:	40.7mmx13.5mmx115.7mm
Weight:	45g(with battery)
Battery Type:	CR2032-3V

Thank you for choosing Pixel Enterprise Limited product and read this user manual. Should you have any questions, please contact the local dealer or visit our website:<http://www.pixelhk.com>

